单页尺寸95.53X135mm

Odokee **U2 User Manual**




Thank you for purchasing Odokee Digital Alarm Clock. To ensure the best product performance, please read this user manual in detail and retain it for future reference.

Questions? Contact Customer Service Center at odokeeshop@outlook.com

Version 2.0

BUTTONS VIEW

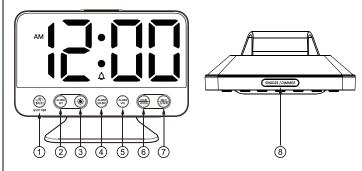

1 2S TIME SET: hold to enter time setting mode **LIGHT DIM:** adjust nightlight brightness

2 ALARM SET: enter alarm setting mode

③ : turn on nightlight and change color hold to turn off nightlight

4 ALARM SOUND: select alarm sound

(5) ALARM VOL: adjust alarm volume

6 HOUR : set hour

switch regular or military time format

turn alarm on/off

® **SNOOZE/DIMMER:** start the 9 minutes snooze

adjust the brightness of the display

1/11

O ITEM COME IN THE BOX

1. Digital Alarm Clock ×1



2. Power Adapter ×1



3. User Manual ×1



PRODUCT SPECIFICATIONS

Dimensions: 5.5(L)*2.36(W)*4.0(H) inches

N Weight: 0.37lb

Clock accuracy: ±13 seconds/month

(in normal temperature)

Material: Plastic

Power Input: DC, 5V/1A

Power: AC, 100-240V (50/60Hz)

USB Output: 5V/1A

POWER SUPPLY: CORDED ELECTRIC **+BATTERY BACKUP**

This item needs to be used with batteries and electric power. The batteries have backup function, which means screen will not light up during power outage, but the alarm works and save all the settings in case of power outages.


FEATURES

- 5 Dimmer levels
- Alarm with 4 volume adjustable and snooze
- Regular time/military time
- 8 Nightlight colors
- USB charging port
- Easy to set

GETTING STARTED

There are two steps to start the clock.

1. Properly place 2 AAA new alkaline batteries(NOT included) in the battery compartment according to the polarity direction indicated, cover back.

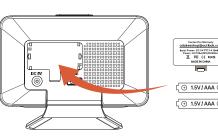

2. Connect the power to start the clock



- 1. For battery and energy saving, the screen of this model will not light up when powered only by batteries.
- 2. The battery has a backup function that ensures that the alarm go off and saves all settings in the event of a power outage.

4/11

CHOOSE REGULAR/MILITARY TIME

In non-setting mode, each push of [12H/24H] button can switch the time display format in regular time(12-hour) or military time(24-hour).







In regular time, AM or PM will display. Otherwise, clock is

SETTING CLOCK TIME

1. Press and hold the **[TIME SET]** button for 2 seconds, HOUR and MINUTE digits start blinking, release button, set current HOUR with **[HOUR]** button and set current MINUTE with **[MIN]** button. Press and hold for fast adjustment.



Set HOUR and MINUTE digits

2. Press [TIME SET] to exit and save the time.

If no buttons are pressed within 8 seconds, time setting mode will end up automatically. Clock will save and display current time you set.

5/11

SETTING ALARM TIME

1. Press [ALARM SET], ALARM HOUR and MINUTE digits start blinking, set current alarm-hour with [HOUR] button and set current alarm-minute with **[MIN]** button. Press and hold for fast adjustment





Set ALARM HOUR and MINUTE digits

2. Press [ALARM SET] to exit and save the alarm-time.

If no buttons are pressed within 8 seconds, alarm setting mode will end up automatically. Clock will save and display current time you set.

TURNING ALARM ON/OFF

In non-setting mode, each push of [AON/OFF] button can turn on or disable the alarm.









6/11

ALARM SOUND

Press [ALARM SOUND] button to select the alarm sound. There will be an eight-second trial listen for alarm sound.



Birds Chirping Beep Soft Music Ode to Joy

Note: Press any button except [ALARM SOUND] to confirm your alarm sound quickly.

ALARM VOLUME

Press the button of [ALARM VOL] to adjust the alarm volume. There will be an eight-second trial listen for alarm volume.













PAUSE ALARM AND RESET FOR NEXT DAY

When alarm goes off, press [AON/OFF] button to pause it, or let the alarm stops on its own. This will re-set the alarm for the next day.



If not stop the alarm, it will last 15 mins before going silent.

7/11

SNOOZE FUNCTION

When alarm goes off, press the top [SNOOZE] button to temporarily suspend the alarm for 9 minutes. Snooze can be repeated once again and again.

2/11

Press [AON/OFF] button to end the Snooze Function.





SETTING NIGHTLIGHT

- 1. Press [🎇] button to turn on the nightlight and adjust nightlight color. 8 colors available as shown in the following sequence: RGB, loop color, red, yellow, green, indigo, blue,
- 2. Press [LIGHT DIM] button to adjust nightlight brightness. There're 5 levels of brightness available.
- 3. Press and hold [🌞] button for 3 seconds to turn off the nightlight.



The nightlight will default to the last color and brightness you selected when you reopen it.

8/11

 
O DIMMER

The brightness of the screen can be freely selected for you with each push of the top button of [DIMMER]

3/11







USB PORT

There is a USB port at the back of the clock to help you charge your cellphone or other electronic gadgets.



TROUBLESHOOTING

- 1. Unable to set time
- --Check if press and hold the **[TIME SET]** button for 2 seconds to enter the time setting mode.
- --Only press [TIME SET] button once cannot enter the time setting mode. --Get customer support for help.
 - 9/11

- 2. Cannot figure out how to completely turn off the alarm
- --In the normal time display, press [AON/OFF] button once to completely turn off the alarm. The [🛕] icon will be disappear when the alarm is disabled.
- --Get customer support for help.
- 3. Alarm doesn't go off at the set time --Check if the alarm is set to AM or PM time.
- --Check if the alarm is turned on
- --Press [ALARM VOL] button to set alarm volume at "U04". --Get customer support for help.
- 4. Display doesn't light up when powered by adapter
- --Check if the power connection is loosed or not.

-- Check if the power outlet is working.

- --Change another power outlet to try again. -- Press top [DIMMER] button to set display brightness
- to brightest level. --Get customer support for help.
- 5. Display doesn't light up when powered by batteries
- --Display does not light up in battery mode.
- --The clock saves all setting, and alarm still works. --Get customer support for help.

Important: Adapter is needed to keep the clock working. Batteries are for memory backup only.

WARRANTY SUPPORT

Odokee customer service is always open for you. For assistance, please keep the model number and order ID number of this product, then contact us by sending email:



Visit(♥ www.odokee.net)for 18-month Warranty

- ★ Get your 18-month warranty.
- right Get products authenticity verified.
- right discounts (if any).
- det your thoughts shared. Every voice matters. reference.

Odokee

CUSTOMER SUPPORT odokeeshop@outlook.com

11/11

10/11