
# 单页尺寸95.53X135mm

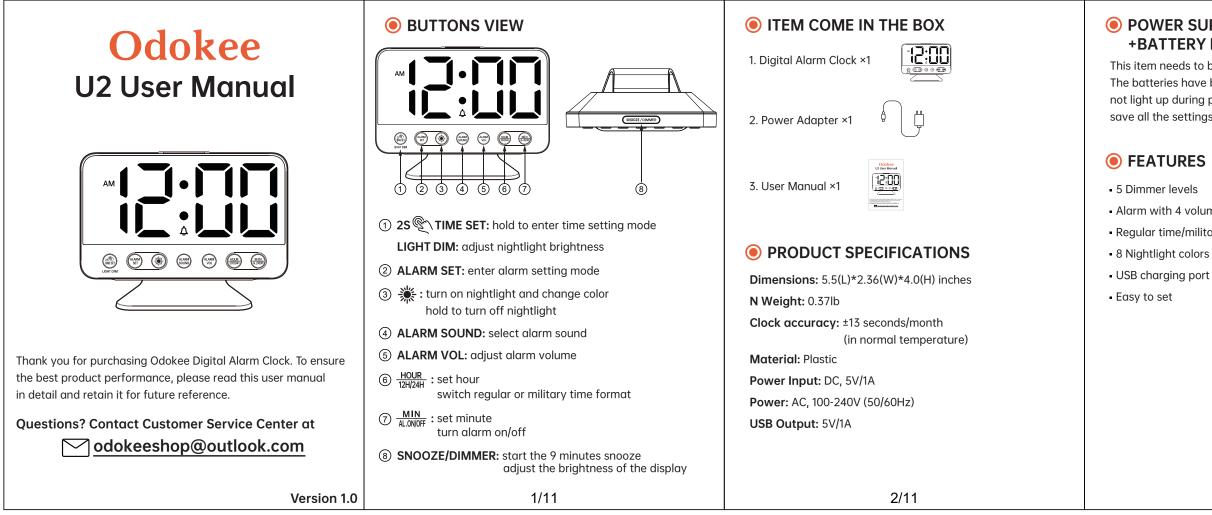

#### SETTING ALARM TIME

1. Press [ALARM SET], ALARM HOUR and MINUTE digits start blinking, set current alarm-hour with **[HOUR]** button and set current alarm-minute with [MIN] button. Press and hold for fast adjustment.



Set ALARM HOUR and MINUTE digits

2. Press [ALARM SET] to exit and save the alarm-time.

Note:

If no buttons are pressed within 8 seconds, alarm setting mode will end up automatically. Clock will save and display current time you set.

#### • TURNING ALARM ON/OFF

In non-setting mode, each push of [AL.ON/OFF] button can turn on or disable the alarm.



## ALARM SOUND

Press [ALARM SOUND] button to select the alarm sound. There will be an eight-second trial listen for alarm sound.



#### Note:

Press any button except [ALARM SOUND] to confirm your alarm sound quickly.

#### ALARM VOUME

Press the button of [ALARM VOL] to adjust the alarm volume. There will be an eight-second trial listen for alarm volume.



#### PAUSE ALARM AND RESET FOR NEXT DAY

When alarm goes off, press [AL.ON/OFF] button to pause it, or let the alarm stops on its own. This will re-set the alarm for the next day.

#### Note:

If not stop the alarm, it will last 15 mins before going silent

## SNOOZE FUNCTION

When alarm goes off, press the top [SNOOZE] button to temporarily suspend the alarm for 9 minutes. Snooze can be repeated once again and again.

Press [AL.ON/OFF] button to end the Snooze Function.



## SETTING NIGHTLIGHT

1. Press [ 💥 ] button to turn on the nightlight and adjust nightlight color. 8 colors available as shown in the following sequence: RGB, loop color, red, yellow, green, indigo, blue, purple, off.

2. Press [LIGHT DIM] button to adjust nightlight brightness. There're 5 levels of brightness available.

3. Press and hold [ 🔆 ] button for 3 seconds to turn off the nightlight.

#### Note

The nightlight will default to the last color and brightness you selected when you reopen it.

8/11

## **O** DIMMER

DIMMER

#### ▲ PLEASE DISPOSE OLD OR DEFECTIVE BATTERIES IN AN ENVIRONMENTALLY SAFE WAY AND IN ACCORDANCE WITH YOUR LOCAL LAWS AND REGULATIONS.


#### • POWER SUPPLY: CORDED ELECTRIC **+BATTERY BACKUP**

This item needs to be used with batteries and electric power. The batteries have backup function, which means screen will not light up during power outage, but the alarm works and save all the settings in case of power outages.

- Alarm with 4 volume adjustable and snooze
- Regular time/military time

#### GETTING STARTED There are two steps to start the clock.

1. Properly place 2 AAA new alkaline batteries(NOT included) in the battery compartment according to the polarity direction indicated, cover back.

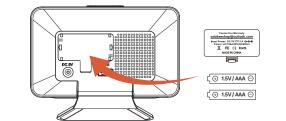

2. Connect the power to start the clock.



#### Note:

1. For battery and energy saving, the screen of this model will not light up when powered only by batteries. 2. The battery has a backup function that ensures that the alarm go off and saves all settings in the event of a power outage.

4/11

#### • CHOOSE REGULAR/MILITARY TIME

In non-setting mode, each push of [12H/24H] button can switch the time display format in regular time(12-hour) or military time(24-hour).





#### Note:

In regular time, AM or PM will display. Otherwise, clock is in Military Time.

#### **O SETTING CLOCK TIME**

1. Press and hold the **[TIME SET]** button for 2 seconds, HOUR and MINUTE digits start blinking, release button, set current HOUR with [HOUR] button and set current MINUTE with [MIN] button. Press and hold for fast adjustment.



2. Press [TIME SET] to exit and save the time.

#### Note

If no buttons are pressed within 8 seconds, time setting mode will end up automatically. Clock will save and display current time you set.

5/11

The brightness of the screen can be freely selected for you with each push of the top button of [DIMMER].



3/11

#### CARE OF YOUR CLOCK

- Clean with a soft, damp cloth.
- Do not use caustic cleaners or abrasives.
- Keep clock away from dust, dirt and moisture. Clean ventilation ports regularly with a gentle puff of air.
- Please remove the batteries when you don't use the clock.

BATTERY SAFETY: Clean the battery contacts and those of the device prior to battery installation. Remove batteries from equipment no longer using for an extended period. Follow the polarity (+/-) mark in the battery compartment. Promptly remove empty batteries from the device. Dispose used batteries properly. Only batteries of the same or equivalent type as recommended are to use. DO NOT incinerate used batteries. DO NOT dispose of batteries in fire, as batteries may explode or leak. DO NOT mix old and new batteries or types of batteries(alkaline/standard), DO NOT use rechargeable batteries. DO NOT recharge non-rechargeable batteries. DO NOT short-circuit the supply terminals.

#### **●** TROUBLESHOOTING

- 1. Alarm doesn't go off at the set time
- --Check if the alarm is set to AM or PM time.
- --Check if the alarm is turned on.
- --Press [ALARM VOL] button to set alarm volume at "U04". --Get customer support for help.
- 2. Display doesn't light up when powered by adapter
- --Check if the power connection is loosed or not.
- --Check if the power outlet is working.
- --Change another power outlet to try again.
- --Press top [DIMMER] button to set display brightness to brightest level.
- --Get customer support for help.
- 3. Display doesn't light up when powered by batteries
- --Display does not light up in battery mode. --The clock saves all setting, and alarm still works.
- --Get customer support for help.

Important: Adapter is needed to keep the clock working. Batteries are for memory backup only.

#### WARRANTY SUPPORT

Odokee customer service is always open for you. For assistance, please keep the model number and order ID number of this product, then contact us by sending email:

10/11

🖂 odokeeshop@outlook.com

| Warranty Card  |                  |
|--|------------------|
| Product Warranty Card  |                  |
| User Name  |                  |
| Product Model  |                  |
| Purchase Method*   | 🔵 Amazon 🛛 Other |
| Order Number*  |                  |
| Purchase Time  |                  |
| Warranty Time  |                  |
| Note:* Options are required.<br>Contact Us To Activate Your 18-month Warranty Now! |                  |
| Email ( 💌 odokeeshop@outlook.com   |                  |
| Visit Q www.odokee.net   |                  |
| Visit (Q www.odokee.net) for   |                  |
| 18-month Warranty  |                  |
| 🚖 🛛 Get your 18-month warranty.  |                  |
| 🔶 Get products authenticity verified.  |                  |
| 🔶 Get limited-time discounts (if any).   |                  |
| ★ Get your thoughts shared. Every voice matters.                                   |                  |
| The set a copy of the user manual for future reference.                            |                  |
| Odokee   |                  |
| CUSTOMER SUPPORT<br>odokeeshop@outlook.com   |                  |
| 11/11  |                  |