


Odokee

M03 User Manual

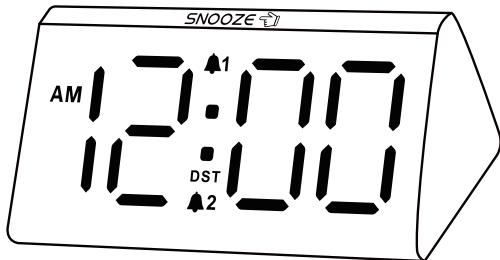

18-month Warranty


After-sales mailbox:

support@odokeeshop.com


Thank you for purchasing ODOKEE!

Please read these instructions carefully before use and retain for future reference.

FRONT VIEW

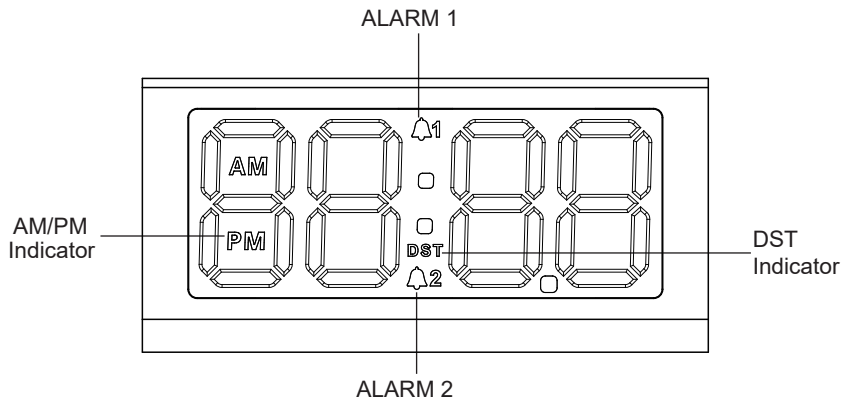


BACK VIEW

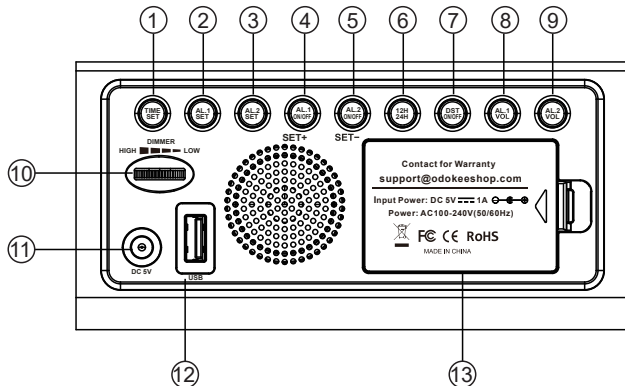

- ① TIME SET: enter time setting
- ② AL.1 SET: enter alarm 1 setting
- ③ AL.2 SET: enter alarm 2 setting
- ④ AL.1 ON/OFF /SET+: turn alarm 1 on/off /set forward
- ⑤ AL.2 ON/OFF /SET-: turn alarm 2 on/off /set backward
- ⑥ 12H/24H: switch regular or military time format
- ⑦ DST ON/OFF: 1 hour forward/backward
- ⑧ AL.1 VOL: set volume of the alarm 1
- ⑨ AL.2 VOL: set volume of the alarm 2
- ⑩ DIMMER +/-: slide to adjust the display brightness
- ⑪ POWER CONNECTOR
- ⑫ USB CHARGING PORT
- ⑬ BATTERY COMPARTMENT

TOP VIEW

TOUCH TO
ACTIVATE
SNOOZE

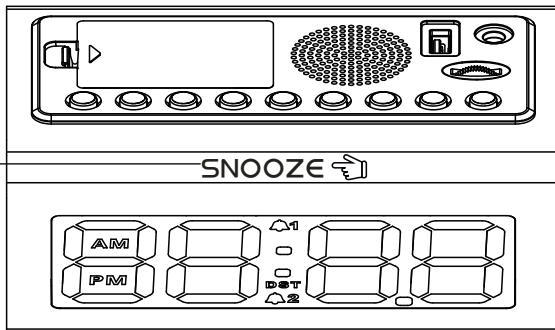




PACKAGE CONTENT


1. Digital Wooden Alarm Clock
2. Power Adapter
3. Instruction Manual




GETTING STARTED


Plug in the adapter into a standard household outlet to get the clock working.
Insert 3 "AAA" batteries (Not Included) to preserve the ALARM and TIME settings in case of power interruption.


TIME SETTING

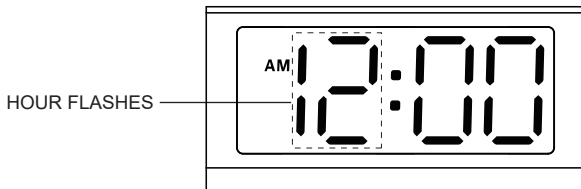1. Press "  " once to enter HOUR setting, use "  " or "  " to adjust the hour (hold for rapid setting).



2. Press “” once again to confirm and enter MINUTE setting, use “” or “” to adjust the minute (hold for rapid setting).

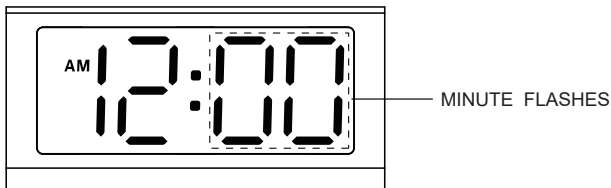


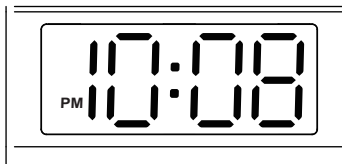
3. Finally press “” to exit and save the time setting.

NOTE:


If digits continue flashing for 15s without any operation, the time setting mode will be exited automatically.

SWITCH TIME FORMAT (12/24HR)

Press “” to convert the time format between regular time (12-hour) and military time (24-hour).



REGULAR TIME

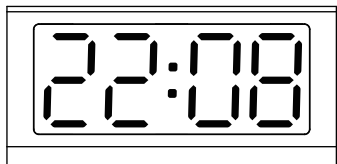

MILITARY TIME

NOTE:


In regular time (12-hour), AM or PM will display. Otherwise, clock is in military time (24-hour).

ALARM ON/OFF


To switch the alarm on or off, press the “” “”. The alarm icon will appear when the alarm is on.

SET+

SET-

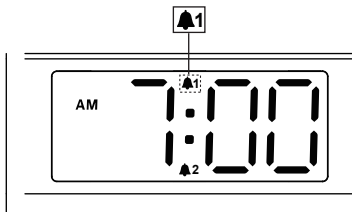

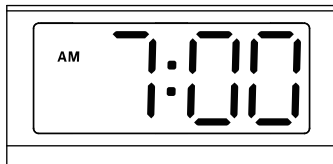


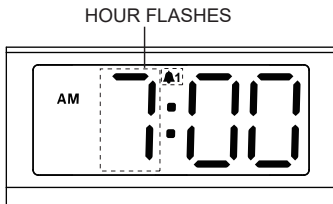
ALARM ON






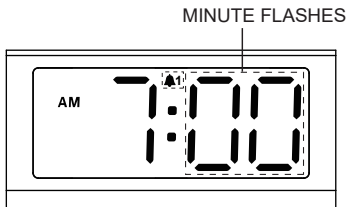
ALARM OFF


ALARM.1.2 SETTING (ALARM 1 and ALARM 2 are set in the same way)

1. To set the alarm 1 time, press “” once to enter HOUR setting, use “” or “” to adjust the hour (hold for rapid setting).



2. Press “” once again to confirm and enter MINUTE setting, use “” or “” to adjust the minute (hold for rapid setting).






3. Finally press “” to confirm and exit from alarm 1 setting mode.

NOTE:

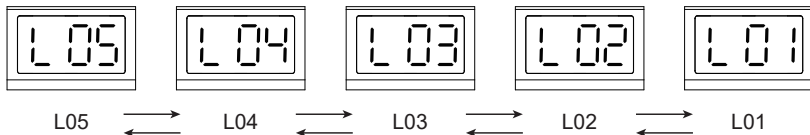

If digits continue flashing for 15s without any operation, the alarm setting mode will be exited automatically.

ALARM VOLUME SETTING




The alarm volume will alternate between “L05 L04 L03 L02 L01” with each press of the “” or “”. The volume range is from 45dB to 105dB, and the default is set to L05 (105 dB).

NOTE:


1. There is a five-second of trial listen for alarm volume while pressing “” or “”.
2. Press any of other button can stop trial listen for alarm volume.

SNOOZE/ TURN OFF ALARM DAILY

1. When the alarm goes off, touch SNOOZE on the top of the clock, and it will go off again 9 minutes later. Snooze can be repeated once again and again.

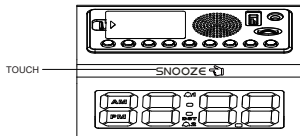

 2. To cancel the snooze at any time or to turn off the alarm for the day while it is sounding, press any buttons behind the clock. The alarm will go off again at the same time of the next day.



3. If not stop the alarm, it will last for 15 minutes before going silent.



BRIGHTNESS CONTROL


Slide the DIMMER knob behind the clock to adjust the display brightness (HIGHT: 100%, LOW: 0%).

NOTE:


When the alarm goes off, the display automatically brightens to its maximum; after the alarm is turned off, the display brightness returns to your preset level.

DST

1. In summer time, press “” to turn on DST function, the DST will display on the screen, time will go forward one hour.
2. In winter time, press “” to turn off DST function, the DST will disappear, time will go backward one hour.

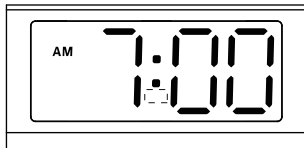

DST OFF
(DST DEFAULT VALUE:OFF)

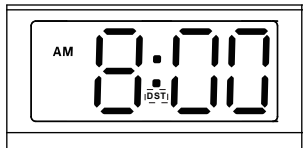

DST ON
(1 HOUR FORWARD)

BATTERY OPERATED MODE

Install 3 "AAA" batteries (Not Included) into battery compartment, the screen will show 8 seconds and goes to sleep for saving battery. Touch the SNOOZE or press any buttons behind the clock to check your time within 8 seconds. The screen will stay on when you plug into the outlet.

NOTE:

In battery operated mode, clock has all functions except for USB charging your electronic devices.

USB CHARGING PORT

Connect a USB charging cable to charge your cellphone or other smart device.

TROUBLESHOOTING

1. Alarm doesn't go off at the set time?

- check if the alarm is set to AM or PM time;
- check if the alarm is turn on (alarm icon display on the screen).

2. Display doesn't light up?

- check if the power connection is loosed or not;
- change another working outlet to try again;
- slide the DIMMER knob to HIGH position in case the display is too dark to see;
- under the battery power, the screen will light up for 8 seconds only when you touch SNOOZE or press any buttons behind the clock.



3. Will the alarm goes off in battery operated mode?

Yes, the alarm will sound in battery operated mode.

4. How to turn off alarm daily?

When the alarm goes off, pressing any buttons at the back of clock will turn the alarm off until the next scheduled time.

5. How to turn off the alarm completely?

In the normal time display, you can turn the alarm off completely by single pressing the “” or “”. The alarm icon will be disappear when the alarm is disabled.

SET+

SET-

WARRANTY

We offer a 45 day money-back guarantee and 18-month free replacement.

SUPPORT

If you encounter any problems with this clock then contact

support@odokeeshop.com

where we will deal with your issue within 24 hours.



Warranty Card

Product Warranty Card	
User Name	
Product Model	
Purchase Method*	<input type="checkbox"/> Amazon <input type="checkbox"/> Other
Order Number*	
Purchase Time	
Warranty Time	

Note:* Options are required

Contact Us To Activate Your 18-Month Warranty Now!

Email  **support@odokeesshop.com**

Visit  **www.odokee.net**

Visit  www.odokee.net for 18-month Warranty

- ★ Get your 18-month warranty.
- ★ Get products authenticity verified.
- ★ Get limited-time discounts (if any).
- ★ Get your thoughts shared. Every voice matters.
- ★ Get a copy of the user manual for future reference.

Odokee

CUSTOMER SUPPORT

support@odokeeshop.com