 


# Odokee

## S02 User Manual

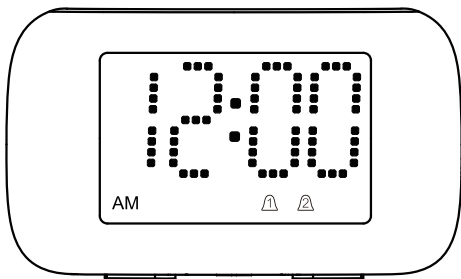 


**18-month Warranty**  
After-sales mailbox:  
**[support@odokeeshop.com](mailto:support@odokeeshop.com)**


---

Thank you for purchasing ODOKEE!  
Please read these instructions carefully before use and retain for future reference.

# FRONT VIEW

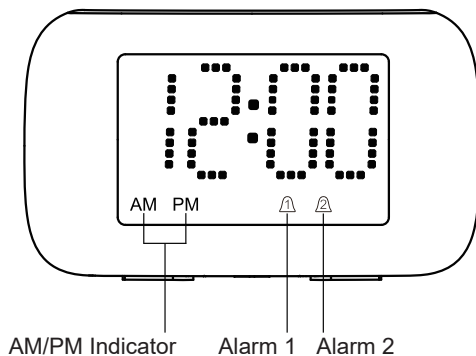


# BACK VIEW

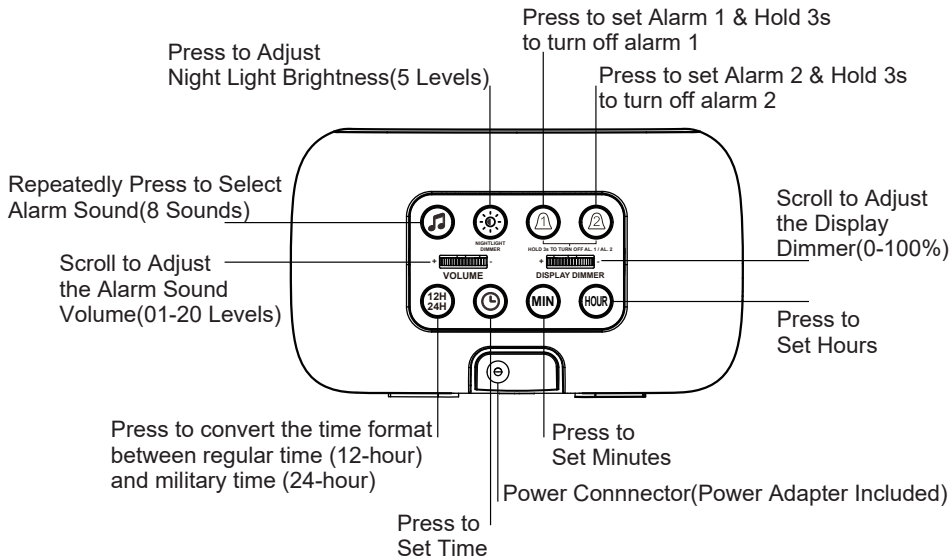 


# TOP VIEW

 1. Tap to turn on night light & Repeatedly tap to Change Light Colors & Long touch for 3s to turn off night light
2. When alarm goes off, tap to Start the 9 Minutes Snooze

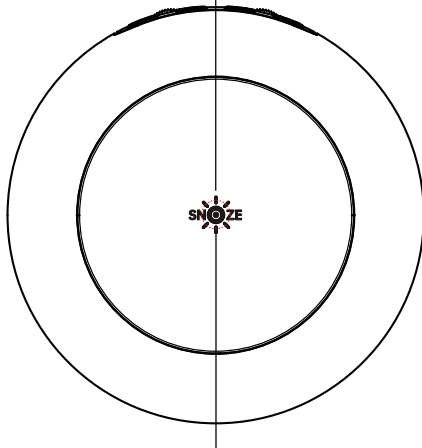

**NOTICE:** Please ensure to tap on the sensing area

# BOTTOM VIEW

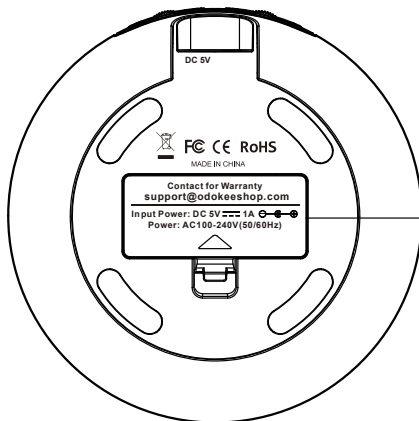 

Battery Compartment  
(Insert 2 "AAA" batteries,  
battery not included)

# GETTING STARTED




Plug in the adapter into a standard household outlet to get the clock working.


Insert 2 “AAA” batteries(Not Included) to preserve the ALARM, TIME and NIGHT LIGHT settings in case of power interruption.


## NOTICE:

1. If the display is "blank" after plugging in, please check whether the DISPLAY DIMMER on the back is at the HIGH position.
2. Under the battery power, the display will go blank and preset alarm will not go off.
3. Once the battery is removed and with an interruption of power, the TIME, ALARM and NIGHT LIGHT need to be reset when the power comes back.

## TIME SETTING

1. Press “” once to enter Time Setting, the HOUR and MINUTE digits will flash on the display. Press “” button to advance to the correct hour and press “” button to advance to the correct minute (hold for rapid setting).

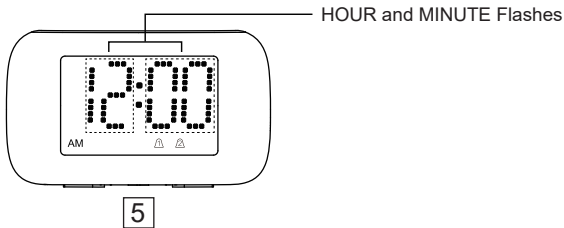


2. Press “  ” to confirm and exit the Time Setting mode.

**NOTICE:** The clock will exit automatically from the Time Setting mode if no action is taken within 10 seconds.(Action refers to pressing the desired button for setup)

## **BRIGHTNESS CONTROL**

Slide the DISPLAY DIMMER knob at the back of the clock to adjust the display brightness(HIGH: 100%, LOW: 0%).



# SWITCH TIME FORMAT (12/24HR)





Press “” to convert the time format between regular time (12-hour) and military time (24-hour). The default is 12-hour time format.

## NOTICE:

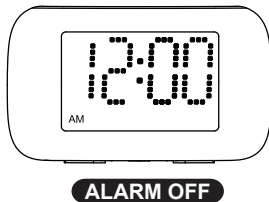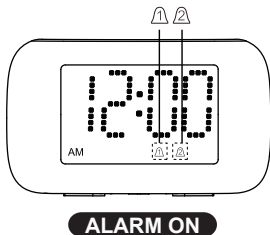When using the 12-hour time format, the AM icon will be appeared for 12:00 midnight through 11:50am, and the PM icon will be appeared for 12:00 noon through 11:59pm.




# ALARM ON/OFF




1. To turn the alarm on, press the “” and “” button. The alarm icon will appear when the alarm is on.
2. To turn the alarm off, hold “” and “” button for 3s, the alarm icon will disappear and the alarm is disabled.




## ALARM SETTING (ALARM 1 and ALARM 2 are set in the same way)


1. Press “” button to enter ALARM 1 Setting, the HOUR and MINUTE digits will flash on the display. Press “” button to advance to the correct hour and press “” button to advance to the correct minute (hold for rapid setting).

HOUR and MINUTE Flashes

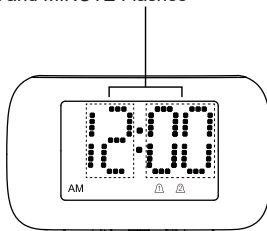

2. Press “” button to confirm and exit from Alarm 1 Setting mode.

## ALARM SOUND SETTING

1. Press the “” button repeatedly to choose among 8 different alarm sound options:  
01=Bird Chirping 02=Piano 03=Soft Music 04=Ocean 05=Buzzer 06=Beep Sound  
07=Bell Sounds 08=Siren Sound
2. If the alarm sound option, for example "02", flashes for more than 5 seconds, the alarm sound "02" will be confirmed automatically and exit from Alarm Sound Set Mode.


### NOTICE:

1. If you are a heavy sleeper, it is recommended that you prefer "08" (Siren Sound) as your wake up sound.





## ALARM VOLUME ADJUST

Slide the VOLUME knob at the back of the clock to adjust volume with a range of 01-20 levels (20-115dB). The default alarm volume is 20 levels, please test to your most appropriate volume before use to prevent shocking you when the alarm goes off.


## SNOOZE/ TURN OFF ALARM DAILY

1. When the alarm goes off, tap  at the top to snooze for a while, the alarm will go off again 9 minutes later.
2. To cancel the snooze at any time or to TURN OFF this day alarm while it is sounding, press any of the buttons at the back of the clock. The alarm will go off again at the same time the next day.
3. If not stop the alarm, it will last 30mins before going silent.


# NIGHT LIGHT SETTING

1. In normal time display mode, tap  at the top to turn on the night light.
2. Tap  repeatedly to choose among 10 different night light color options. 10 colors change as shown in the following sequence: L01=Red, L02=Orange, L03=Yellow, L04=Green, L05=Indigo, L06=Blue, L07=Purple, L08=Loop Color, L09=Warm Light, L10=RGB Color(The default color is RGB mode).
3. Press “” at the back of the machine repeatedly to adjust the night light brightness, 5 levels(100%-70%-50%-30%-10%) brightness adjustable.
4. Long touch  for 3 seconds to turn the light off.

**NOTICE:** The night light will default to the last color you choose when you reopen it.

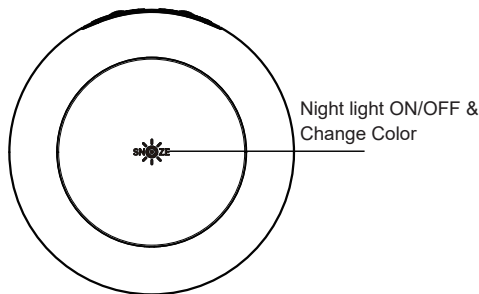

Kindly Note: Be sure to tap the sensing area with your fingertips

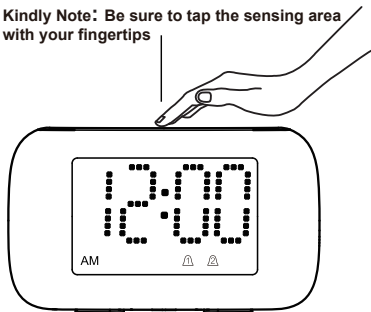

# TROUBLESHOOTING

## 1. Alarm doesn't go off at the set time?

- check if the alarm is set to AM or PM time;
- check if the alarm is turn on (alarm icon display on the screen);

## 2. Display doesn't light up?

- check if the power connection is loosed or not;
- change another working outlet to try again;
- slide the DIMMER knob to HIGH position in case the display is too dark to see.

## 3. How to turn off alarm completely?

- When alarm goes off, or in the normal time display, you can turn the alarm off completely by long press the “1” “2” for 3 seconds. The alarm icon will be disappear and the alarm is disabled.

## 4. Night light not sensitive to touch?

- Please ensure to tap on the sensing area with your fingertips.

## **WARRANTY**

We offer a 45 day money-back guarantee and 18-month free replacement.

## **SUPPORT**

If you encounter any problems with this clock then contact

**support@odokeeshop.com**

where we will deal with your issue within 24 hours.



## Warranty Card

Product Warranty Card	
User Name	
Product Model	
Purchase Method*	<input type="checkbox"/> Amazon <input type="checkbox"/> Other
Order Number*	
Purchase Time	
Warranty Time	

Note:\* Options are required

Contact Us To Activate Your 18-Month Warranty Now!

Email  **support@odokeesshop.com**

Visit  **www.odokee.net**

**Visit  [www.odokee.net](http://www.odokee.net) for 18-month Warranty**

- ★ Get your 18-month warranty.
- ★ Get products authenticity verified.
- ★ Get limited-time discounts (if any).
- ★ Get your thoughts shared. Every voice matters.
- ★ Get a copy of the user manual for future reference.

# Odokee

**CUSTOMER SUPPORT**

**[support@odokeesshop.com](mailto:support@odokeesshop.com)**