


# Odokee

## UE216-FM User Manual

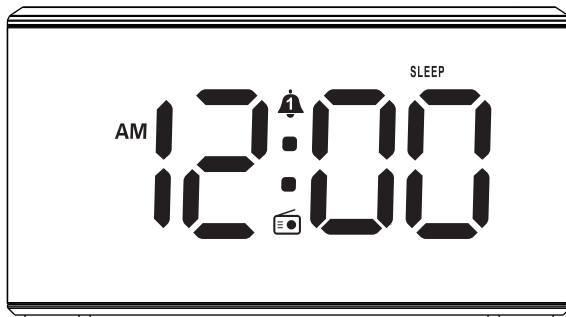

**18-month Warranty**


After-sales mailbox:

**support@odokeeshop.com**


---

Thank you for purchasing Odokee!  
Please read these instructions carefully before use and retain for future reference.


# FRONT VIEW

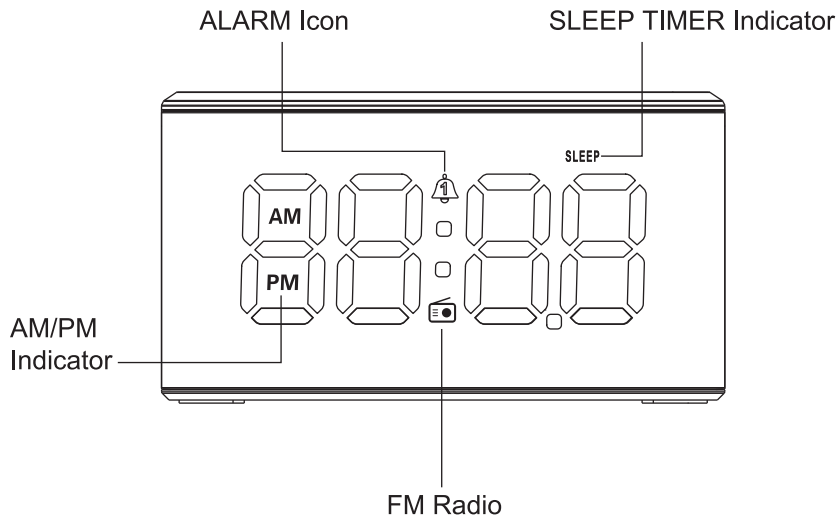

# BACK VIEW

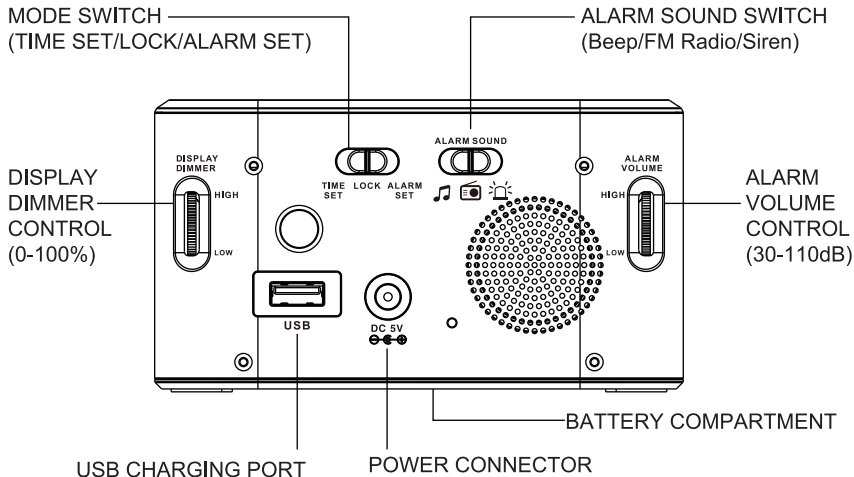

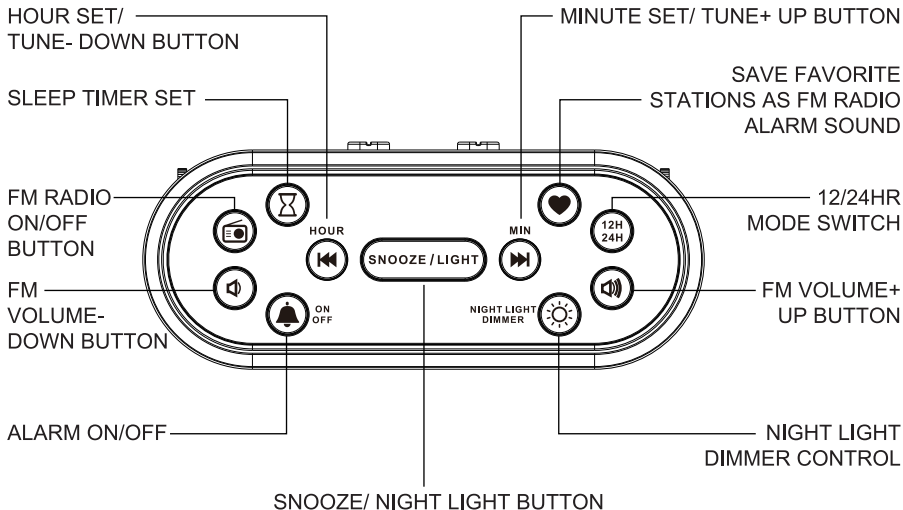


# TOP VIEW




# GETTING STARTED


Plug in the adapter into a standard household outlet to get the clock working.  
Insert 3 “AAA” batteries(Not Included) to preserve the ALL settings in case of power interruption.

## TIME SETTING

1. Slide “” to **TIME SET** position to enter time setting, the HOUR and MINUTE digits will flash on the display. Press “” to advance to the correct hour, and press “” to advance to the correct minute (hold for rapid setting).

HOUR and MINUTE Flashes

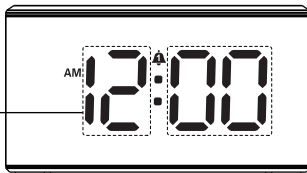


2. Slide “” to **LOCK** position when the correct time is shown on the display, display will now stop flashing.

# ☆ **INSTRUCTIONAL VIDEO FOR TIME SETTING**

You also have the option to scan the below QR code to complete the time setting.




## SWITCH TIME FORMAT (12/24HR)

Press “” to toggle between 12 and 24 hour mode (the default is 12-hour time format).

**NOTICE:** When using the 12-hour time format, AM/PM icon will appear to suggest morning/afternoon time.

## ALARM ON/OFF

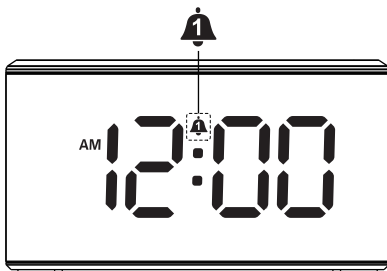




**ALARM ON**




**ALARM OFF**


To switch the alarm on or off, press “”. The alarm icon will appear when the alarm is on.

# ALARM SETTING

1. Slide “” to **ALARM SET** position to enter alarm time setting, the HOUR and MINUTE digits will flash on the display. Press “” to advance to the correct hour, and press “” to advance to the correct minute (hold for rapid setting).

HOUR and MINUTE Flashes

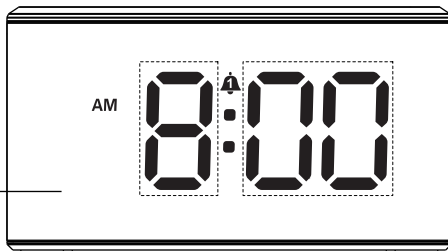


2. Slide “” to **LOCK** position when the correct alarm time is shown on the display, display will now stop flashing.



# ☆ INSTRUCTIONAL VIDEO FOR ALARM SETTING



You also have the option to scan the below QR code to complete the alarm setting.





3. Slide "  " to choose from Beep, Siren or FM Radio which is the last tuned in radio station or the station you set in **WAKE UP RADIO ALARM SETTING** (Page 12) as wake up sound.

**NOTICE:** If you are a heavy sleeper, it is recommended that you prefer Beep or Siren as your wake up sound.

## ALARM VOLUME SETTING


1. When radio is OFF, press the top “” or “” to adjust the radio alarm volume level, 01-20 level adjustable. The volume value will appear when you are adjusting volume.

**NOTICE:** The top “” or “” ONLY control the volume of FM Radio, not the volume of the 2 built-in alarm sounds(Beep and Siren).

2. Slide the **ALARM VOLUME** knob at the left side of back of the clock to adjust the volume of Beep or Siren with a range of 30-110dB. The default alarm volume is 110dB (max), please test to your most appropriate volume before use to prevent shocking you when the alarm goes off.

## SNOOZE/ TURN OFF ALARM DAILY

1. When the alarm goes off, press **SNOOZE** to snooze for a while, the alarm will go off again 9 minutes later.


2. To cancel the snooze at any time or to TURN OFF this day alarm while it is sounding, press “”. The alarm will go off again at the same time the next day.


3. If not stop the alarm, 2 built in alarm(Beep/Siren) will last 15mins before going silent. However, the Radio alarm, are customized. That means when alarm goes off and don't stop it, it'll ring 1 hour before going silent.

# NIGHT LIGHT SETTING

1. In normal time display mode, press **LIGHT** to turn on the night light.

2. Press **LIGHT** repeatedly to choose among 8 different night light color options. 8 colors change as shown in the following sequence: red, orange, yellow, green, blue, indigo, purple, loop color, off.

3. Press “” repeatedly to adjust the night light brightness when it lights up, 5 level brightness adjustable.

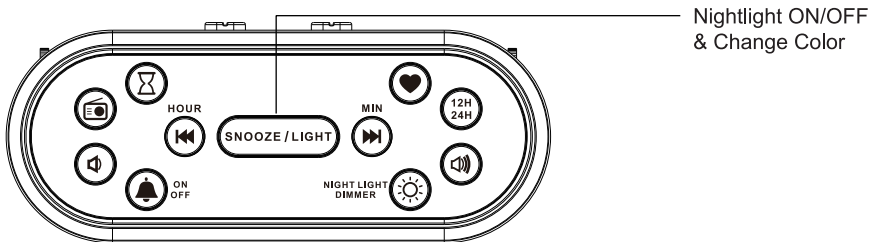





4. Press and hold **LIGHT** for 3 seconds (release it) to turn it off.


**NOTICE:** The night light will default to the last color you choose when you reopen it.



# FM RADIO SETTING

Please extend the FM antenna on the back of the clock.

1. Press “” every time, FM radio will be ON/OFF.

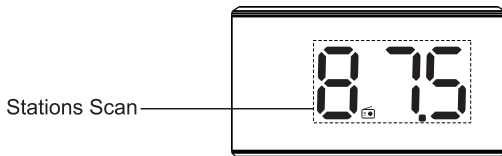
2. Press and hold “” for 2s when radio is on, FM radio will scan and auto-store the scanned stations. Once the station search is completed, the first station will be played automatically. Press “” or “” to tune from auto-store stations.



3. Use “” or “” to adjust the volume of FM radio. 01-20 level adjustable.

# WAKE UP RADIO ALARM SETTING

When radio is on, press “” or “” to tune radio stations you like, then press “” and icon “AL” will appear on the display screen. The clock immediately saves this station as Wake Up Radio Alarm Sound.

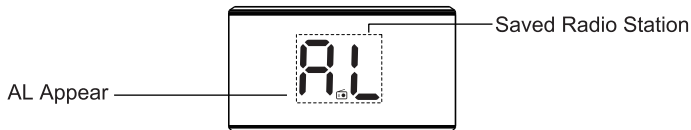

## ☆ INSTRUCTIONAL VIDEO FOR WAKE UP RADIO ALARM SETTING

You also have the option to scan the below QR code to complete the radio alarm setting.



## SLEEP TIMER SETTING

Sleep timer lets you fall asleep while listening to FM radio for the set sleep duration then turns the radio off.

1. When radio is on, press repeatedly “” to select the sleep timer ranging from OFF, 30, 60, 90, 180 minutes. The sleep timer will be seen on the display.



Sleep Timer, 180 minutes

2. When the sleep timer is set, please wait for 3 seconds to exit from the setup. The “SLEEP” indicator will be seen on the display.



Sleep Timer ON

3. To turn off the sleep timer, press repeatedly “” to select “OFF” and wait for 3 seconds for it to work.

4. When sleep timer is on, press “” to see the sleep timer remained.

## BRIGHTNESS CONTROL

There are 0-100% brightness levels for LED Display. Slide the **DISPLAY DIMMER** knob at the right side of back of the clock to adjust the display brightness (HIGH: 100%, LOW: 0%).

## BATTERY OPERATED MODE

Plug 3\*AAA batteries(Not Included) into Battery Compartment. The screen will show 8 seconds and goes to sleep for saving battery. Press the biggest **SNOOZE** button to check your time within 8 seconds. The screen will stay on when you plug into the outlet.

**NOTICE:** In Battery Operated Mode, clock has all functions except for USB charging your electronic devices.

## USB CHARGING PORT

Connect a USB charging cable to charge your cellphone or other smart device.

## CARE OF YOUR CLOCK




Please replace the backup batteries every year or consider storing the clock without a battery when it is not in use. Please use a cloth or a paper towel to clean it. Avoid any corrosive cleaner or chemical solutions when cleaning. Make sure the clock is kept clean and dry always.

# TROUBLESHOOTING

## 1. Is there a way to manually tune the radio? I can not get above 98.3 with the 30 auto-store channels. The stations I listen to are in the hundreds.

Yes, it has two modes: Automatic and Manual. You can save your wanted radio stations via the Manual mode, but Please Note: it only can be saved one stations once in Manual mode.

Here is the operation guide for Manual mode:

- \* Unplug and remove the battery to reset, set again after power cycle;
- \* Press “” to enter the FM Mode;
- \* Press “” or “” to manually tune your desired stations. Please extend the FM wire antenna and vary the directions to get the best FM receptions.

## 2. Will the alarm goes off in battery operated mode?


Yes, the alarm will sound in battery operated mode.

## 3. Why does the screen blank after 8 seconds? Every time you press the SNOOZE button, it lights up again?

In the Battery Operated Mode, the screen will show 8 seconds and goes to sleep for saving battery. Press the **SNOOZE** button to check your time within 8 seconds. The screen will stay on when you plug into the outlet.



#### **4.How to turn off alarm daily?**

When the alarm goes off, pressing “” will turn the alarm off until the next scheduled time.

#### **5.How to turn off the alarm completely?**

In the normal time display, you can turn the alarm off completely by single pressing the

“”. The alarm icon will be disappear when the alarm is disabled.

#### **6.Is the radio volume independent from the radio alarm volume?**

Yes, it is. There are two buttons on the top to adjust the volume up and down: when the radio is on it controls the radio volume (with F in front of the number) and when radio is off it controls the radio alarm volume (with V in front of the number).

## **WARRANTY**

We offer a 45 day money-back guarantee and 18-month free replacement.

## **SUPPORT**

If you encounter any problems with this clock then contact

**support@odokeeshop.com**

where we will deal with your issue within 24 hours.