


Odokee

UE218 User Manual

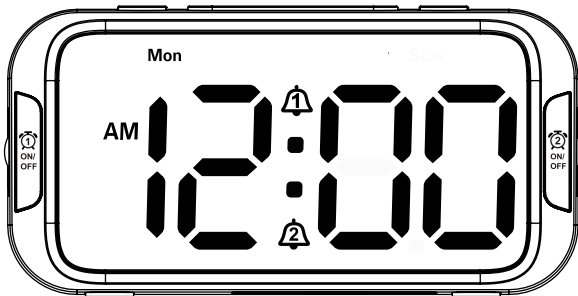

18-month Warranty


After-sales mailbox:

support@odokeeshop.com


Thank you for purchasing ODOKEE!

Please read these instructions carefully before use and retain for future reference.


FRONT VIEW

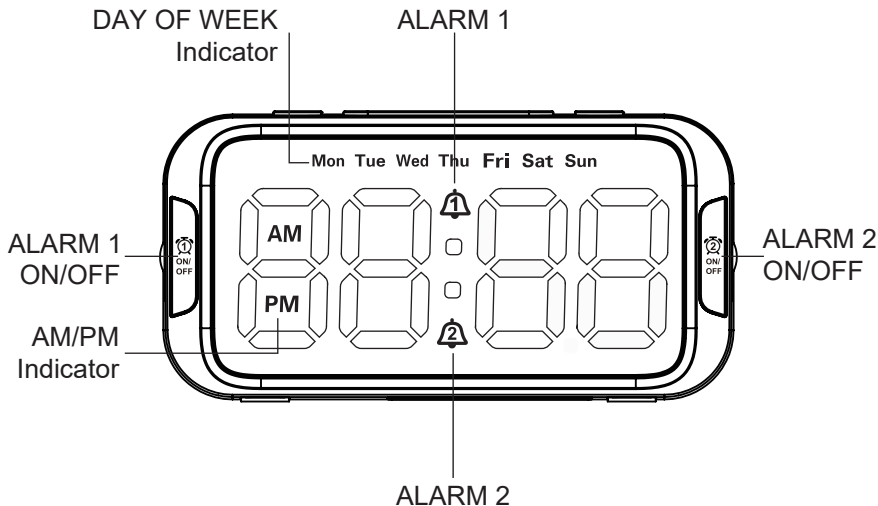


BACK VIEW

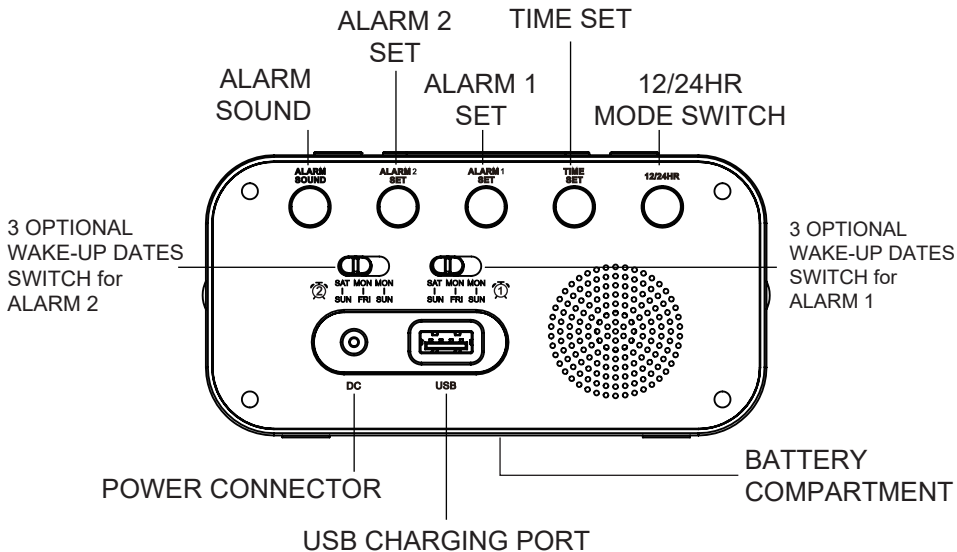


TOP VIEW

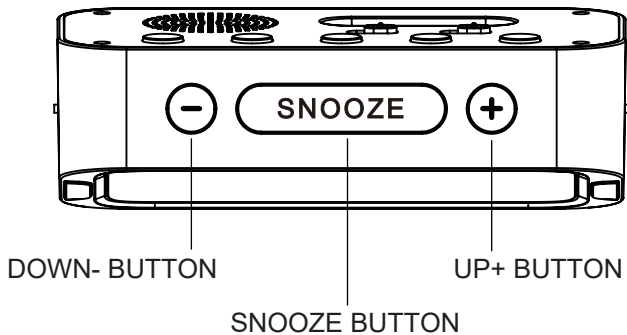

SIDE VIEW

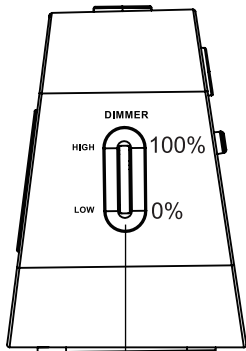

DIMMER
CONTROL(0-100%)

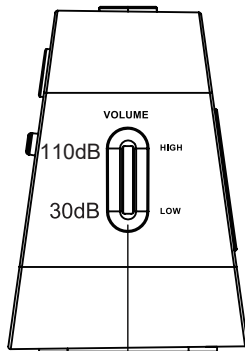


VOLUME
CONTROL(30-110dB)

GETTING STARTED

Plug in the adapter into a standard household outlet to get the clock working.
Insert 3 “AAA” batteries(Not Included) to preserve the ALARM and TIME settings in case of power interruption.

TIME SETTING

1.Press **TIME SET** to enter HOUR setting. Use (- / +) to adjust the hour (hold for rapid setting).

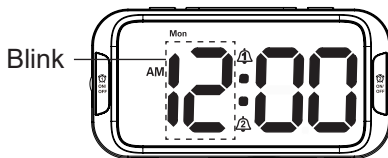

2.Press **TIME SET** to confirm and enter MINUTE setting. Use (- / +) to adjust the minute.



3. Press **TIME SET** to confirm and enter DAY OF WEEK setting. Use (- / +) to choose.



4. Press **TIME SET** to confirm and exit from Time Setting Mode.

NOTICE: If digits continue flashing for 10s without any operation, the setting mode will be exited automatically.

☆INSTRUCTIONAL VIDEO FOR TIME SETTING

You also have the option to scan the below QR code to complete the time setting.



SWITCH TIME FORMAT (12/24HR)

Press **12/24HR** to toggle between 12 and 24 hour mode (the default is 12-hour time format).


NOTICE: When using the 12-hour time format, AM/PM icon will appear to suggest morning/afternoon time.

☆ INSTRUCTIONAL VIDEO FOR SWITCH TIME FORMAT

You also have the option to scan the below QR code to toggle 12 and 24 hour mode.



ALARM ON/OFF

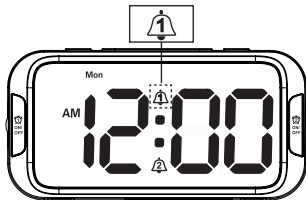

ALARM ON



ALARM OFF

To switch the alarm on or off, press the “^①ON/” “^②ON/”. The alarm icon will appear when the alarm is on.


☆ INSTRUCTIONAL VIDEO FOR ALARM ON/OFF

You also have the option to scan the below QR code to switch the alarm on or off.




ALARM.1.2 SETTING (ALARM 1 and ALARM 2 are set in the same way)

1. Press **ALARM 1 SET** to enter ALARM 1 HOUR setting. Use (- / +) to adjust the hour (hold for rapid setting).

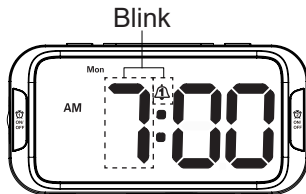

2.Press **ALARM 1 SET** to confirm and enter MINUTE setting. Use (- / +) to adjust the minute.

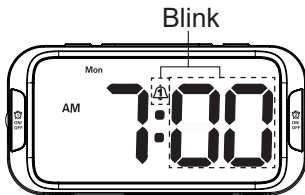

3.Press **ALARM 1 SET** to confirm and exit from Alarm 1 Setting Mode.

NOTICE: Slide the **VOLUME** knob at the left side of the clock to adjust volume with a range of 30-110dB. The default alarm volume is 110dB (max), please test to your most appropriate volume before use to prevent shocking you when the alarm goes off.

☆ **INSTRUCTIONAL VIDEO FOR ALARM.1.2 SETTING**

You also have the option to scan the below QR code to complete the alarm setting.



ALARM SOUND SETTING

1. Press **ALARM SOUND**

The alarm sound options will flash, and the alarm sound will ring. Press **ALARM SOUND** repeatedly to choose among five different alarm sound options: 01 = Siren ; 02 = Beep; 03 = Birds Chirping; 04 = Buzzer ; 05 = Soft Music.

2. If the alarm sound option, for example "02", flashes for more than 5 seconds, the alarm sound "02" will be confirmed automatically and exit from Alarm Sound Set Mode.

NOTICE:

1. Press any button on the back except **ALARM SOUND** to confirm your alarm sound quickly.

2. If you are a heavy sleeper, it is recommended that you prefer "01" (Siren) as your wake up sound.

WAKE-UP DAYS SETTING IN THE BACK

Each of the two alarms have the options for MON-SUN (All-7-day), MON-FRI (Weekday), SAT-SUN (Weekend). Slide the “ SAT MON MON “  ” to set the wake-up days in the back.
SUN FRI SUN SUN FRI SUN

NOTICE:

1. Please make sure that you set the correct Day in the **TIME SETTING**;
2. The days setting in the back ONLY enable you to set the alarm for all 7 days, weekdays only or weekends only, it means that the alarm can't be set to turn off on certain days only.

☆ INSTRUCTIONAL VIDEO FOR WAKE-UP DAYS SETTING

You also have the option to scan the below QR code to complete the wake-up days setting.



SNOOZE/ TURN OFF ALARM DAILY

1. When the alarm goes off, press **SNOOZE** to snooze for a while, the alarm will go off again 9 minutes later.
2. To cancel the snooze at any time or to **TURN OFF** this day alarm while it is sounding, press any of the buttons except **SNOOZE** button. The alarm will go off again at the same time the next day.

BRIGHTNESS CONTROL

Slide the **DIMMER** knob at the right side of the clock to adjust the display brightness (HIGH: 100%, LOW: 0%).

BATTERY OPERATED MODE

Plug 3*AAA batteries(Not Included) into Battery Compartment. The screen will show 8 seconds and goes to sleep for saving battery. Press the biggest **SNOOZE** button to check your time within 8 seconds. The screen will stay on when you plug into the outlet.

NOTICE: In Battery Operated Mode, clock has all functions except for USB charging your electronic devices.

USB CHARGING PORT

Connect a USB charging cable to charge your cellphone or other smart device.

TROUBLESHOOTING

1. Will the alarm go off in battery operated mode?

Yes, the alarm will sound in battery operated mode.



2. Why does the screen blank after 8 seconds? Every time you press the SNOOZE button, it lights up again?

In the Battery Operated Mode, the screen will show 8 seconds and goes to sleep for saving battery. Press the SNOOZE button to check your time within 8 seconds. The screen will stay on when you plug into the outlet.

3. How to turn off alarm daily?

When the alarm goes off, pressing any of the buttons except SNOOZE button will turn the alarm off until the next scheduled time.

4. How to turn off the alarm completely?

In the normal time display, you can turn the alarm off completely by single pressing the “” “”. The alarm icon will disappear when the alarm is disabled.

ON/
OFF

ON/
OFF

WARRANTY

We offer a 45 day money-back guarantee and 18-month free replacement.

SUPPORT

If you encounter any problems with this clock then contact

support@odokeeshop.com

where we will deal with your issue within 24 hours.